

# SCREWS

Self-tapping screws are available for securing PCBs and mounting plates as well as components.

Installation instructions: Please note the different types of cross-head screws (PZ / PH) as well as the size of the screwdriver.



## Select Versions



**A0304031**  
Self-tapping screws 2.2 x 5 mm  
(PZ1)



**A0305031**  
Self-tapping screws 2.5 x 6 mm  
(PZ1)



**A0306031**  
Self-tapping screws 3 x 6 mm  
(PZ1)



**A0308031**  
Self-tapping screws 3 x 8 mm  
(PZ1)

# SCREWS



**A0308132**  
Self-tapping screw 3 x 8 mm  
(T10)  
Stainless steel



**A0325060**  
Self-tapping screw 2.5 x 6 mm  
(T8)  
Stainless steel



**A0325080**  
Self-tapping screws 2.5 x 8 mm  
(PZ1)



**A0330080**  
Screw M3 x 8 mm (T10)  
Stainless steel



**A0399T06**  
Torx T6 screwdriver



**A0399T08**  
Torx T8 screwdriver



**A0399T20**  
Torx T20 screwdriver



**A9199008**  
Set of screws



**B5111201**  
Set of screws

## Accessory



**A0399T10**  
Torx T10 screwdriver